

HANDHELD STEAM CLEANER

INSTRUCTION MANUAL

MODEL: EM-338



Please retain for
future reference



UK
CA



RoHS

Made in China

SPECIFICATION

Model: EM-338

Dimensions: 265 × 142 × 230 mm

Net Weight: 1.63 kg (including accessories)

Main Materials: PP + PA66, Aluminium + Copper

Voltage / Frequency: AC 220–240 V ~ 50/60 Hz

Power Output: 900–1050 W

Steam Pressure: 2.5–3.5 bar

Heating Temperature: 105°C

Water Tank Capacity: 350 ml (recommended fill) / 450 ml (tank capacity)


Heating Time: 3–5 minutes

Continuous Steam Time: 10–12 minutes

Power Cable Length: 3 m (usable length approx. 2.8 m)

PACKAGE CONTENTS

- | | |
|-----------------------------------|-----------------------------------|
| 1. Power LED (indicator light) | 8. Long spray nozzle |
| 2. Power cable and plug | 9. Funnel |
| 3. Steam trigger with safety lock | 10. Nylon brush |
| 4. Safety cap | 11. Bent nozzle |
| 5. Short spray nozzle | 12. Fabric steaming sleeve |
| 6. Extension hose | 13. Fabric steaming tool |
| 7. Measuring cup | 14. Window and door cleaning tool |

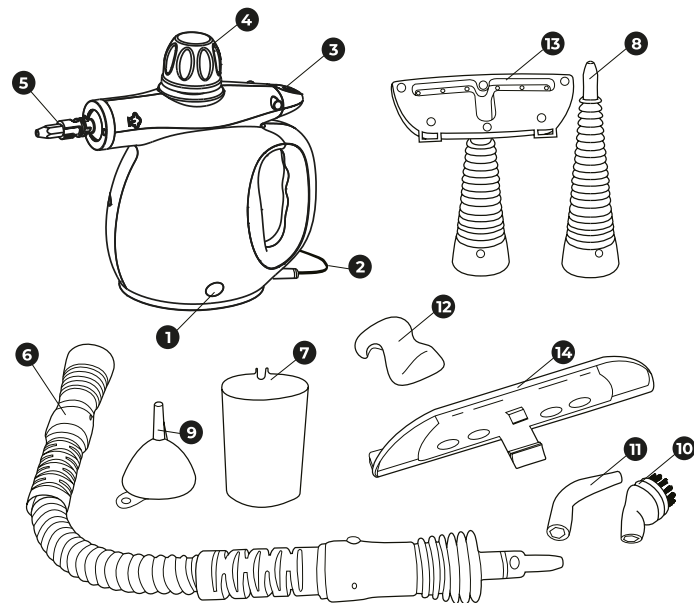




SAFETY PRECAUTIONS

- This appliance is intended for household use only.
- This appliance is not a toy and **must not be used by children**.
- To reduce the risk of electric shock, **do not** immerse the power cable or plug in water or any other liquid.
- **Do not** fill the water tank while the appliance is switched on or plugged in.
- Ensure your mains power supply and socket comply with the product requirements shown in this manual before use.
- Always connect to an earthed mains socket.
- Ensure the safety cap is fully tightened before operation. Failure to do so may result in hot water or steam escaping and causing injury.
- Never direct steam towards people or animals.
- **Do not** use this appliance on equipment containing electrical components.
- **Do not** add rust remover, alcohol, detergent, or any chemicals to the water tank. These substances may damage the appliance.



STEAM LOCK / CHILD LOCK FUNCTION

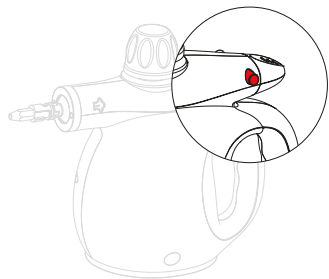

- Push the lock lever forward after pressing the steam trigger to allow continuous steam without needing to hold the trigger down.
- Pull the lever back to return to normal trigger operation.
- If you need to leave the appliance unattended temporarily, activate the child lock to prevent accidental steam release. To continue cleaning, simply return the lever to its original position.

OPERATING INSTRUCTIONS

NOTE: Although the tank capacity is **450 ml**, the maximum recommended fill level is **350 ml (175 ml + 175 ml fill marks)** to leave enough space for steam generation.

Filling the Tank

1. Unpack the appliance and check all accessories are included and undamaged.
2. Place the unit on a stable surface and carefully turn the top cap anti-clockwise to open it. Use the funnel to fill with water.
3. Turn the cap clockwise until fully tightened.
4. Plug the appliance into the mains socket.
5. When the indicator light switches off, the appliance has reached operating temperature and is ready to use.
6. Slide the steam lock forward and press the steam trigger briefly to check steam is being released correctly.
7. Press and hold the steam trigger and attach the required accessory for cleaning.
8. Keep the nozzle at least 5 cm (2 in) away from surfaces for best pressure and performance.




IMPORTANT:

During operation, do not tilt the appliance more than 45°, otherwise boiling water may be expelled together with steam and could cause serious injury.

ACCESSORY INSTALLATION

Installing the Straight Nozzle

1. Hold the appliance with one hand.
2. Align the arrow on the straight nozzle with the single-line marking on the short spray nozzle.
3. Insert the straight nozzle into position.
4. Rotate clockwise until locked.
To remove, rotate anti-clockwise and align the arrows before pulling away.

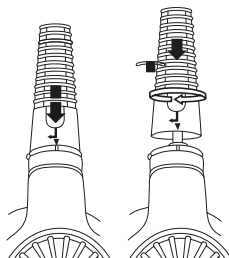


Installing the Extension Hose

Install in the same way as the straight nozzle.


Installing the Round Brush | Bent Nozzle

1. Fit the round brush or bent nozzle to the short spray nozzle.
2. These accessories may also be fitted to the extension hose for easier operation. We recommend using the extension hose where possible.
3. Push the accessory firmly into place. The short spray nozzle may be rotated for convenience.
4. To remove, pull the accessory straight off.

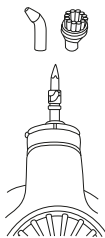

Using The Fabric Steaming Tool


1. Attach the fabric sleeve (12) to the fabric steaming tool (13).
2. Connect the extension hose (6) for refreshing and removing creases from clothing and fabrics.
3. Hang garments securely before steaming.
4. Plug in the appliance and begin steaming.

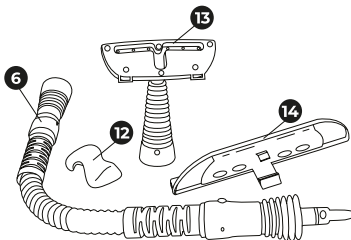

ACCESSORY INSTALLATION

Using The Window and Door Cleaning Tool

1. To clean windows and doors, attach the window cleaning tool (14) to the fabric steaming tool (13).
2. Remove the fabric sleeve (12) first before fitting the window cleaning attachment (14).
3. Connect the assembly to the extension hose and secure using the rubber fixing ring.
4. To return to fabric steaming mode, remove the window cleaning tool and refit the fabric sleeve.

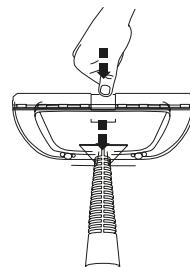

REFILLING WATER DURING USE

1. Switch off the appliance and unplug from the mains.
2. Press the steam trigger until steam stops completely. Slowly loosen the safety cap (do not remove too quickly as residual steam may remain). Wait until all steam pressure has released before fully removing the cap.
3. Allow the appliance to cool for approximately **five minutes**.
4. Refill using the measuring cup with up to **350 ml maximum** of cold or hot water.
5. Refit the safety cap securely before restarting.

AFTER USE

1. Switch off the appliance and unplug from the mains.
2. Press the steam trigger to release any remaining pressure inside the unit.
3. Allow the appliance to cool fully. Continue releasing steam slowly until no more steam is produced. Leave the appliance in a cool place until completely cooled.
4. Empty any remaining water from the tank and wipe the exterior with a dry cloth.
5. Refit the safety cap securely.

COMPLIANCE


This product complies with:

- Low Voltage Directive 2014/35/EU
- RoHS Directive 2011/65/EU (with amendment EU 2015/863)



WEEE Compliance:

This symbol indicates that this product must not be disposed of with regular household waste. It should be taken to an appropriate collection point for the recycling of electrical and electronic equipment in accordance with local regulations.

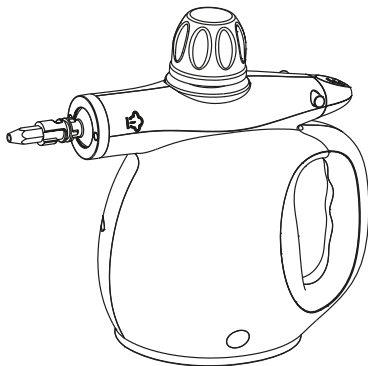

Part of Simply Brands
simply-brands.com

UK Distributor:
JRP Distribution Ltd
Unit 10A Chichester Business Park, PO20 2FT
Website: jrpdistribution.co.uk

EU Address:
Simply Brands Deutschland GmbH
- Ernst-August-Platz 10, 30159
Hannover